

## TRIFLOW CARTRIDGE REPLACEMENT (STAINLESS STEEL HOUSING)

The cartridge in your Triflow filter needs to be changed every six months. At this stage, the carbon filter element may begin to lose its effectiveness in the removal of lead, turbidity, chlorine, bad taste and odour.

### CHANGING THE CARTRIDGE IS A SIMPLE MATTER

- 1 Shut-off the mains water supply. A stop valve with a blue or black handle was supplied with the system for this purpose, and will be found located on the adjacent pipework.
- 2 Turn the filtered lever on the tap to the ON position. This will confirm that the water supply is turned off, and will release the pressure in the system.
- 3 Conveniently position a suitable receptacle to catch residual water from the housing. Lift the filter unit from its retaining bracket. Twist the housing clockwise a quarter turn to open, then pull off.
- 4 Hold the Cap 'B' firmly with one hand and unscrew the Cartridge 'C' with the other. Discard the old cartridge with your household waste. The filter is not recyclable.
- 5 Wash Housing 'A' in warm soapy water, then rinse well. Do not use a dishwasher to clean the unit.
- 6 Wet the two 'O' seals 'D' on the threaded end of the new cartridge, then screw it carefully into the female thread in Cap 'B'.

- 7 Fit Cap 'B' and Housing 'A' back together and then twist a quarter turn anti clockwise.
- 8 Replace the unit on the bracket and turn on the water supply.
- 9 Run the filtered water for 2 minutes to flush the system, checking carefully for leaks. The system should now be ready for use.

### IDLE PERIODS AND WINTER PREPARATION

If you plan to be away from home for extended periods, or the filter housing may be subject to the risk of freezing, carry out the procedures 1 to 4. Dry the cartridge and store in a safe place at room temperature. Wash housing as in step 5.

When the risk of freezing subsides and you wish to use the system again, reinstall the cartridge as in the procedure steps 6 to 9. The system should now be ready for use. Allowing the unit to freeze will invalidate the product warranty\*.

**Please Note** The cartridge is fragile and can be easily damaged if not handled with care. Therefore be mindful when screwing the cartridge into the housing cap, making sure you do not crossthread or overtighten. Screw the cartridge into the housing cap until you feel first resistance. **DO NOT** overtighten.

Triflow Concepts Limited  
Global House  
95 Vantage Point  
The Pensnett Estate  
Kingswinford  
West Midlands  
DY6 7FT

Phone: +44 (0)800 999 3959  
support@triflowconcepts.com  
<http://store.triflowconcepts.com>

